fire HD10
amazon

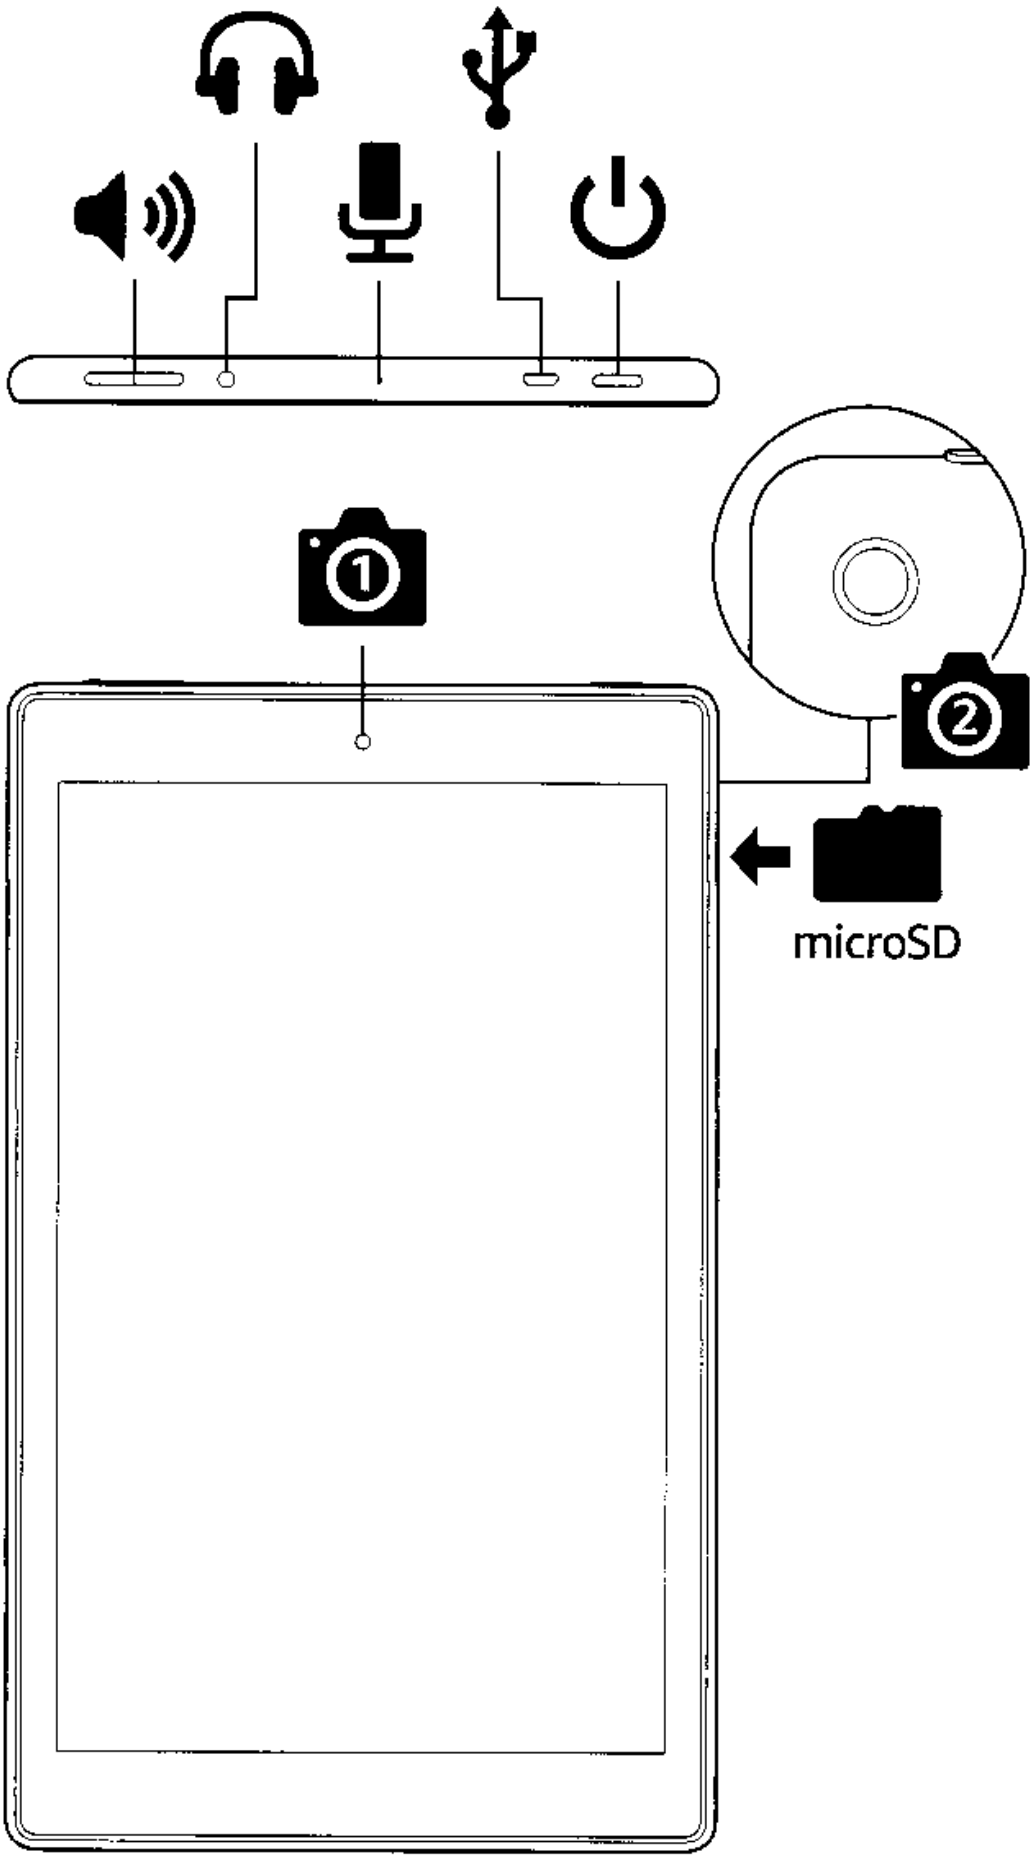
①
②
microSD

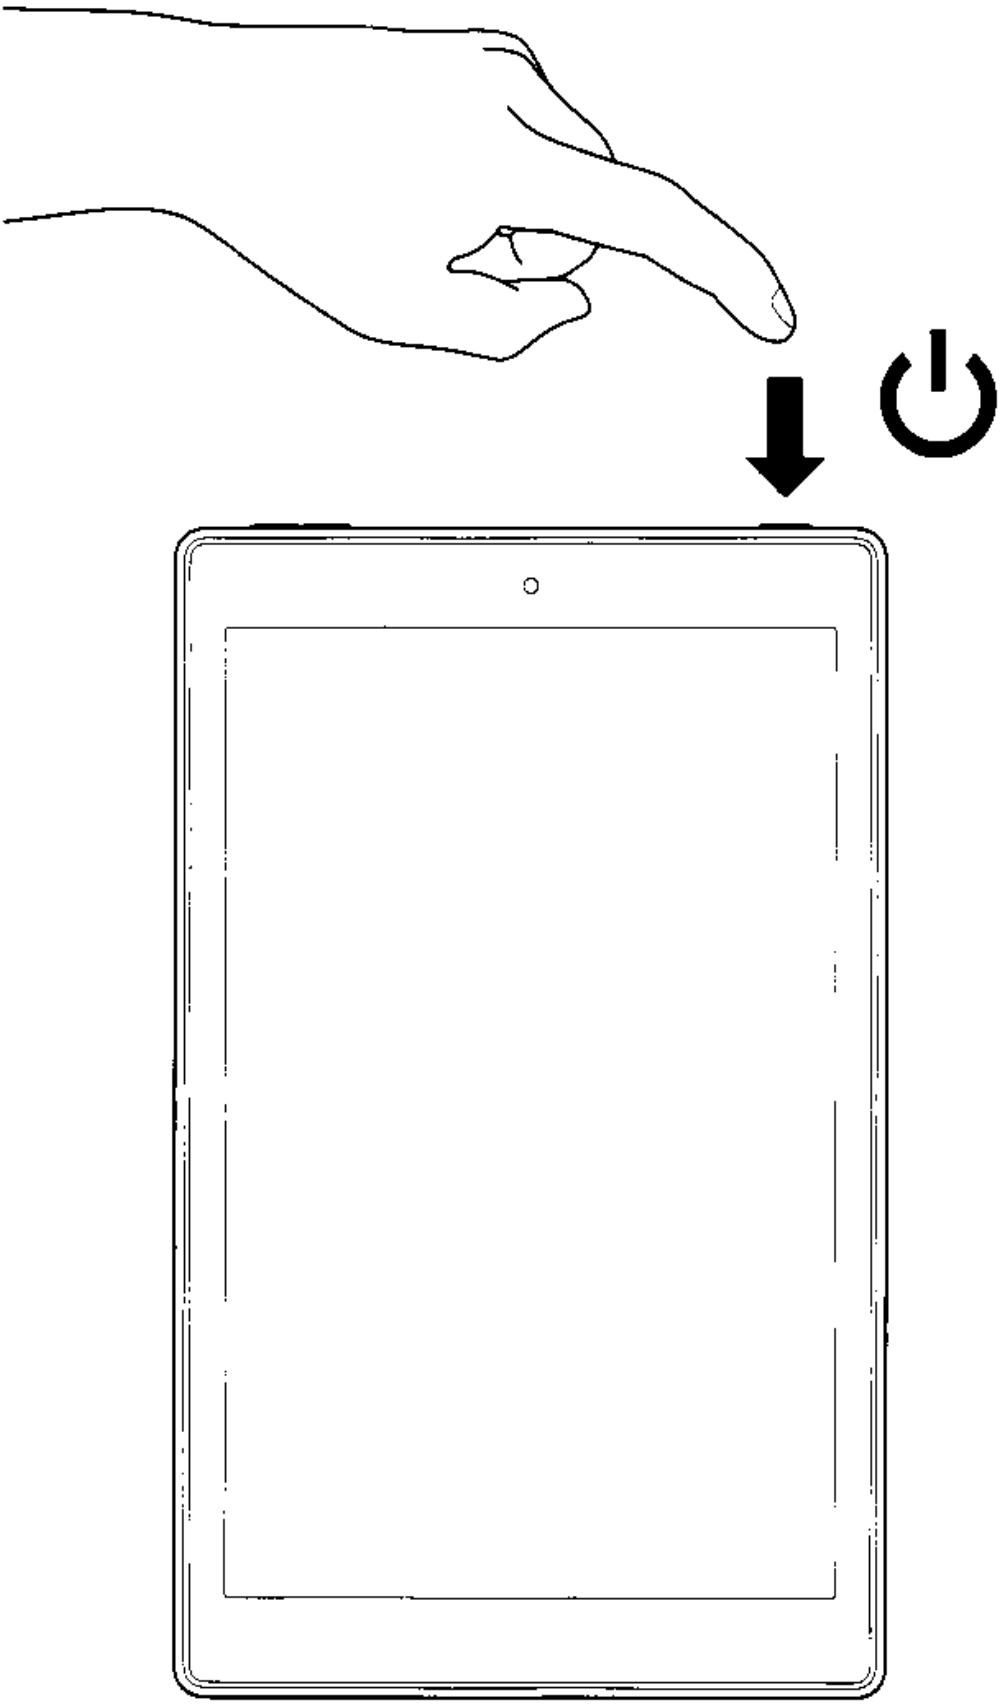

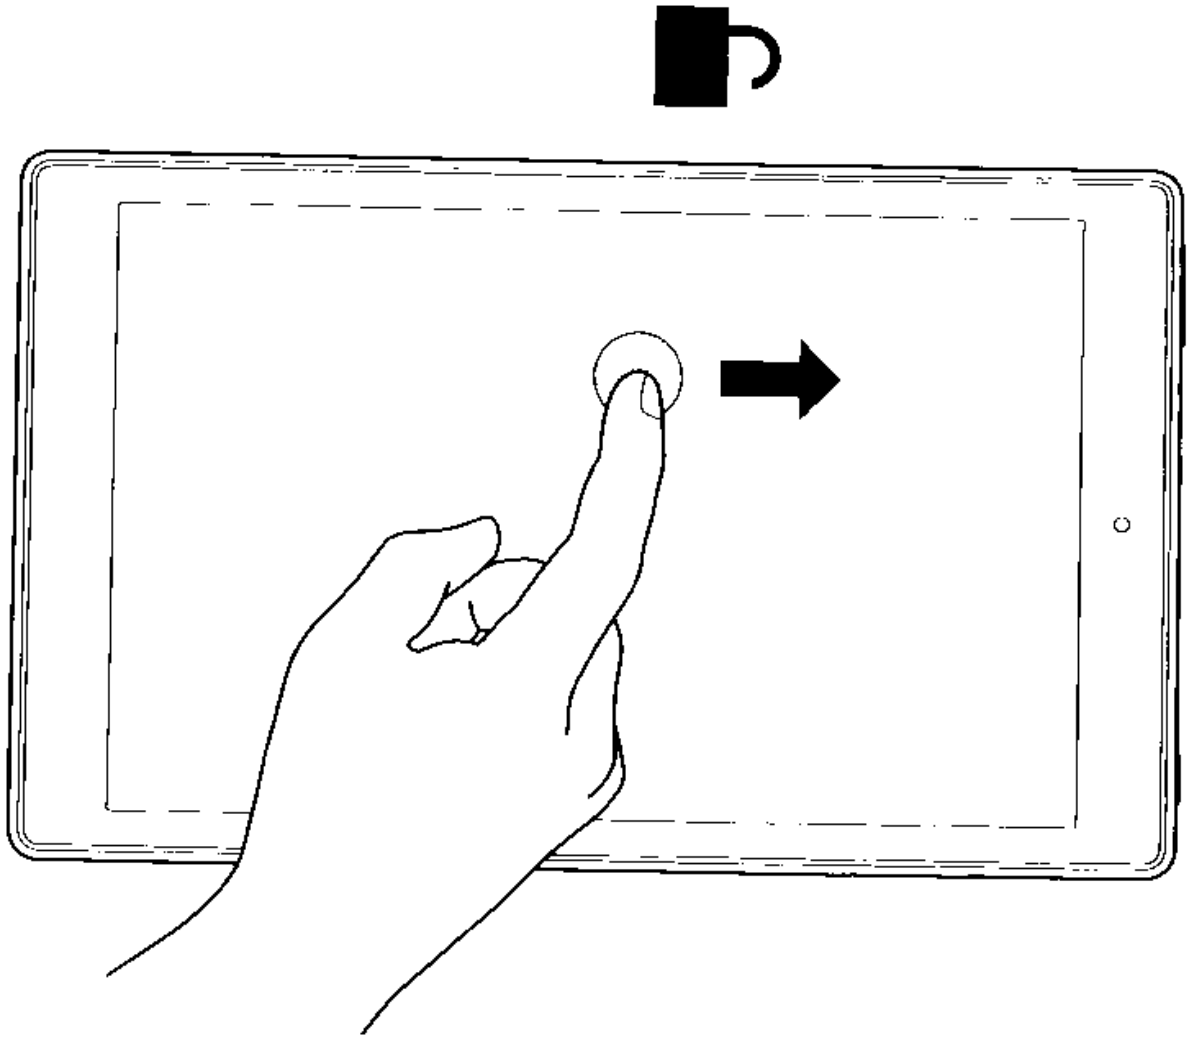

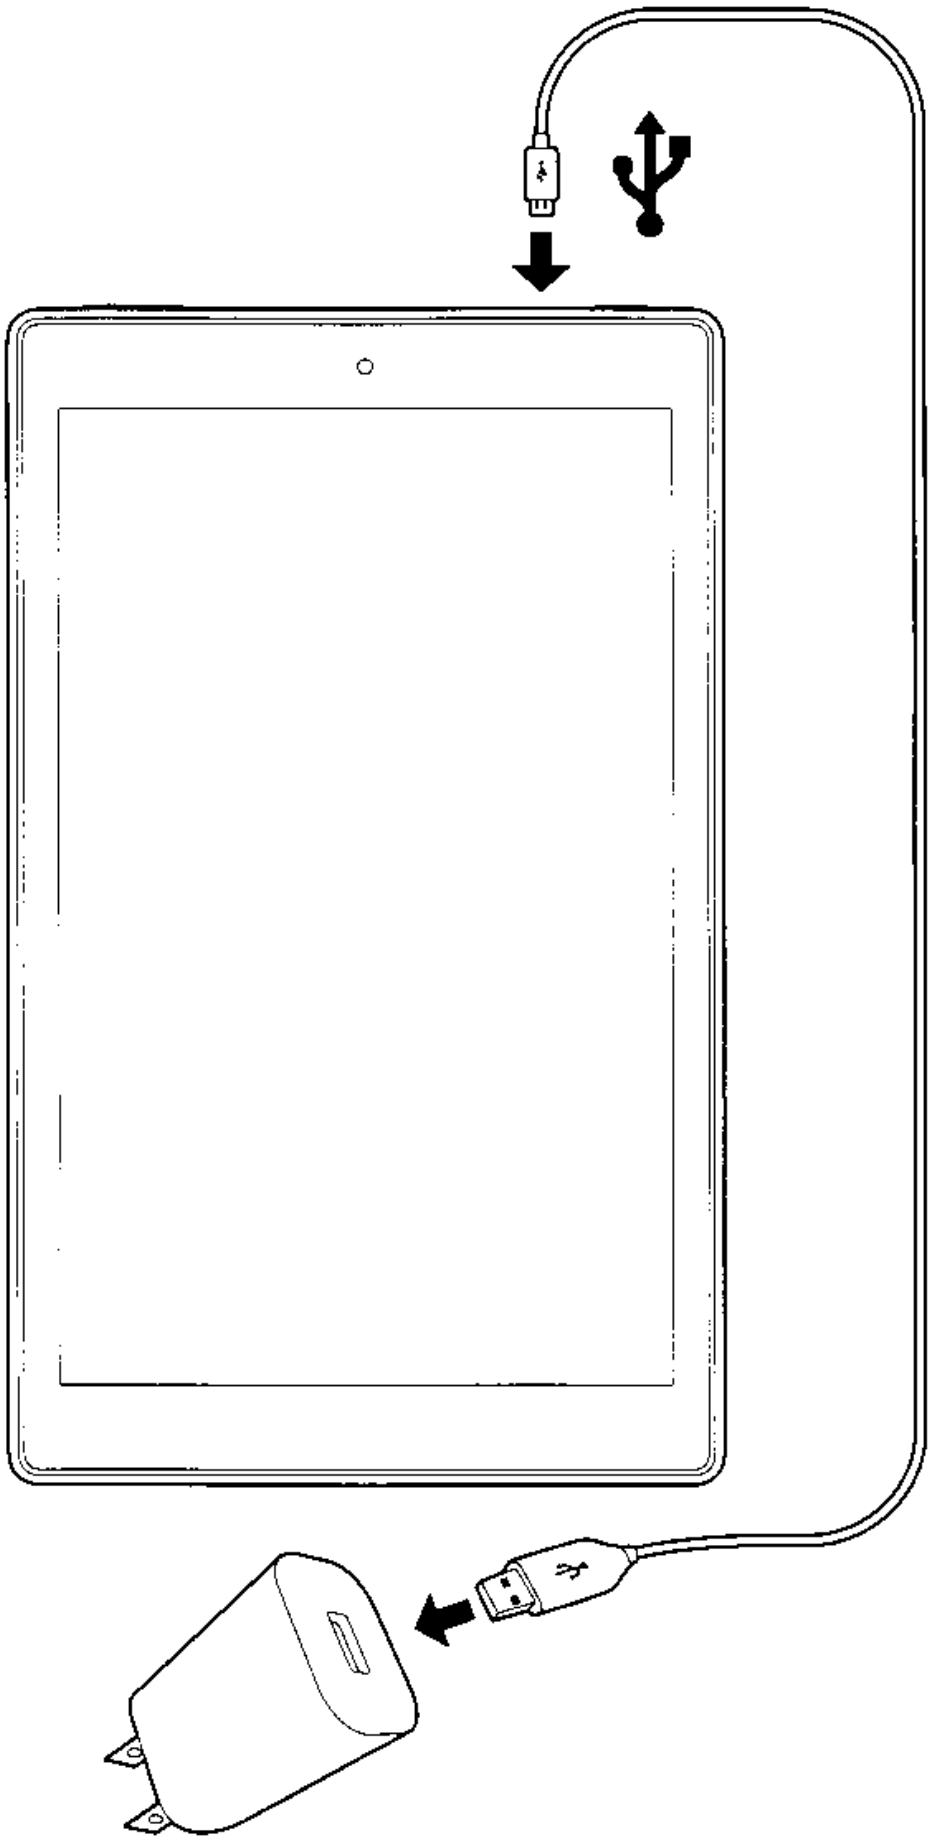

Important Product Information

Safety, compliance, recycling and other important information regarding your Fire tablet can be found in the Legal & Compliance section of the Settings menu on your Fire tablet.

⚠ FAILURE TO FOLLOW THESE SAFETY INSTRUCTIONS COULD RESULT IN FIRE, ELECTRIC SHOCK OR OTHER INJURY OR DAMAGE.

Battery Safety

HANDLE WITH CARE. The Fire tablet contains a rechargeable lithium polymer battery and should be replaced only by an authorized service provider. Do not disassemble, open, crush, bend, deform, puncture, shred or attempt to access the battery in your Fire tablet. Do not modify or remanufacture the battery, attempt to insert foreign objects into the battery, immerse or expose it to water or other liquids, expose to fire, explosion, or other hazard. Only use the battery for the system for which it is specified. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard. Do not short-circuit a battery or allow metallic conductive objects to come into contact with battery terminals. Avoid dropping the device or battery. If the device or battery is dropped, especially on a hard surface, and the user suspects damage, do not attempt repair. Contact Amazon Customer Service for assistance.

Keep the device and its power adapter in a well-ventilated area and away from heat sources, especially when in use or charging. For more information about batteries, go to www.amazon.com/devicesupport. Your device is shipped

22-000843-01

with an AC adapter. Your Fire tablet should only be charged using the AC adapter and USB cable included with the device, or another USB cable approved for use with your Fire tablet, with a compatible USB charger or USB port that meets the following requirements: USB-IF Battery Charging Spec, Rev 1.2. To reduce the risk of fire or electric shock when using the AC adapter, carefully follow these instructions:

- Do not force the adapter into a power outlet.
- Do not expose adapter or cable to liquids.
- If the adapter or cable appears damaged, discontinue use immediately.
- Power adapter designed only for use with Fire devices.

Headphone Safety

AVOID PROLONGED LISTENING AT HIGH VOLUME.

Prolonged listening of the player at high volume can damage the ear of the user. To prevent possible hearing damage, users should not listen at high volume levels for long periods.

Amazon Terms & Policies

BEFORE USING THE FIRE TABLET, PLEASE READ THE TERMS LOCATED AT WWW.AMAZON.COM/DEVICESUPPORT AND ALL RULES AND POLICIES FOR THE FIRE TABLET AND SERVICES RELATED TO THE DEVICE (INCLUDING, BUT NOT LIMITED TO, THE AMAZON PRIVACY NOTICE LOCATED AT WWW.AMAZON.COM/PRIVACY AND ANY RULES OR USAGE PROVISIONS ACCESSIBLE THROUGH THE WWW.AMAZON.COM WEBSITE OR THE DEVICE) (COLLECTIVELY, THE "AGREEMENTS"). BY USING THE FIRE TABLET, YOU AGREE TO BE BOUND BY THE TERMS OF THE AGREEMENTS.

Your Fire tablet is covered by a Limited Warranty. Details are available at www.amazon.com/devicesupport.

Contact Information. For communications concerning the Agreements, you may contact Amazon by writing to Amazon.com, Attn: Legal Department, 410 Terry Avenue North, Seattle, WA, 98109-5210, USA.

Model Number: SL056ZE
Electrical Rating: 5.2V ⎓ 1.8A
Temperature Rating: 0-35°C

© 2017 Amazon.com, Inc. or its affiliates. All rights reserved. Amazon, Fire, and the Amazon logo are trademarks of Amazon.com, Inc. or its affiliates. The microSD Logo is a trademark of SD-3C, LLC..